

# Quick Start Guide

LF10/20

---




Version: 1.0

Date: June 2019

# Overview

LF10

LF20

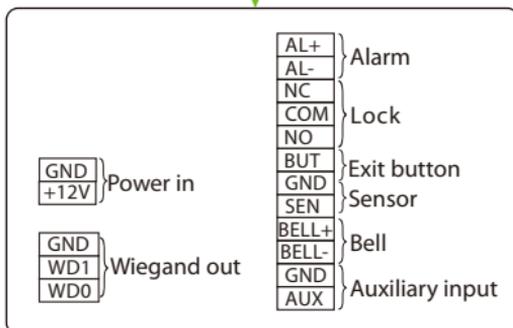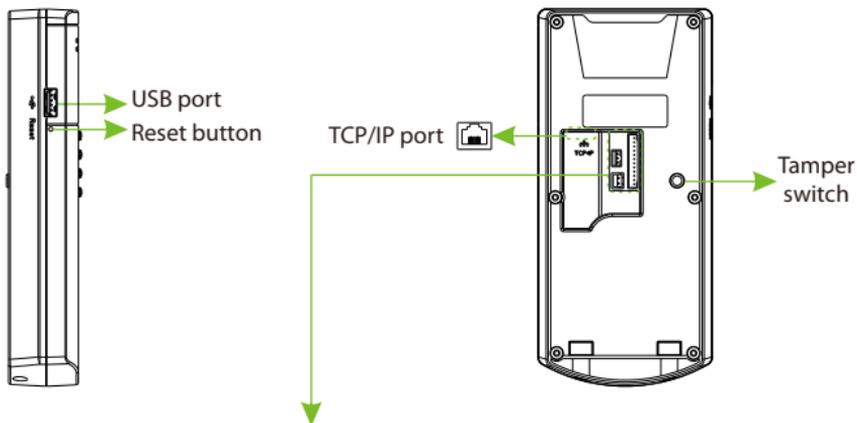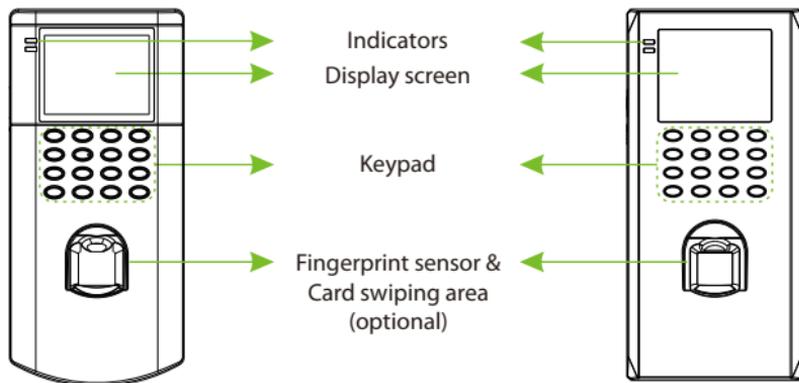


# Device Installation


Please insert the cable into the terminal before installation.

- ① Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
- ② Fix the back plate on the wall using wall mounting screws. Attach the device to the back plate.
- ③ Fasten the device to the back plate with a security screw.


1

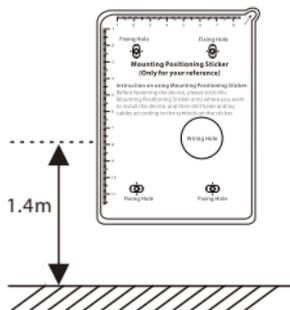


2

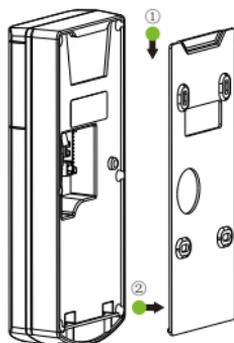


3

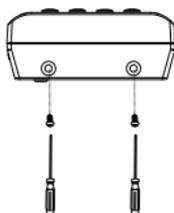

# Standalone Installation

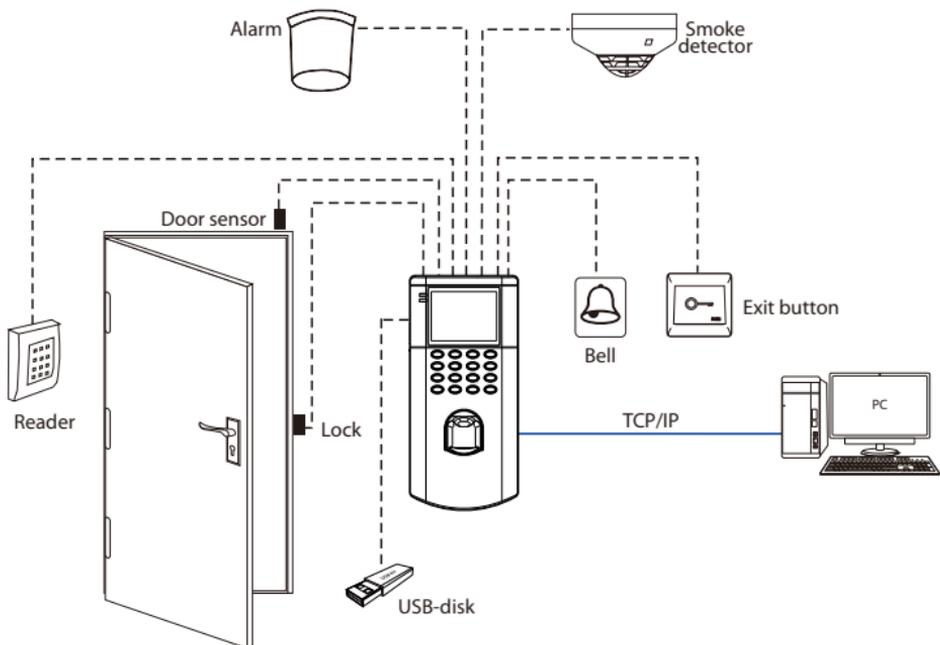

# Door Sensor, Exit Button, Alarm & Bell Connection

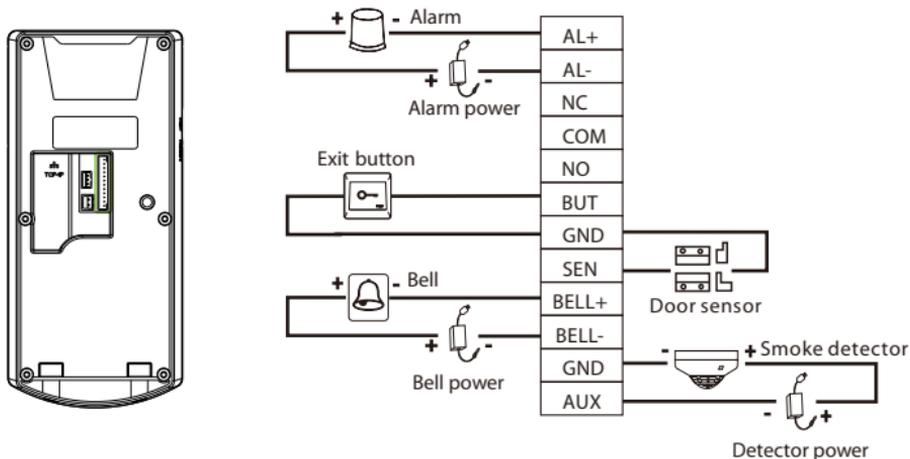


# Lock Relay Connection

The system supports Normally Opened Lock and Normally Closed Lock.


The NO LOCK (normally unlocked when power-on) is connected with 'NO' and 'COM' ports, and the NC LOCK (normally locked when power-on) is connected with 'NC' and 'COM' ports.

Take NC Lock as an example below:



## 1) Device not sharing power with the lock

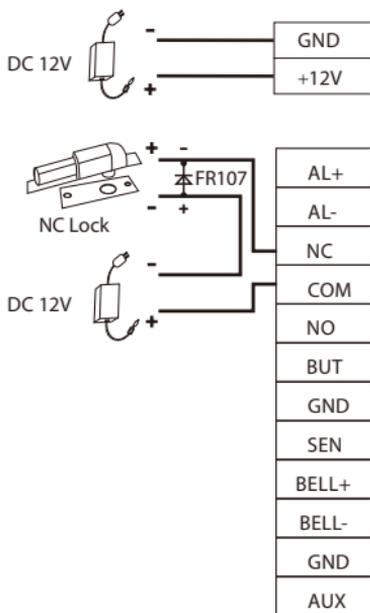

## 2) Device sharing power with the lock

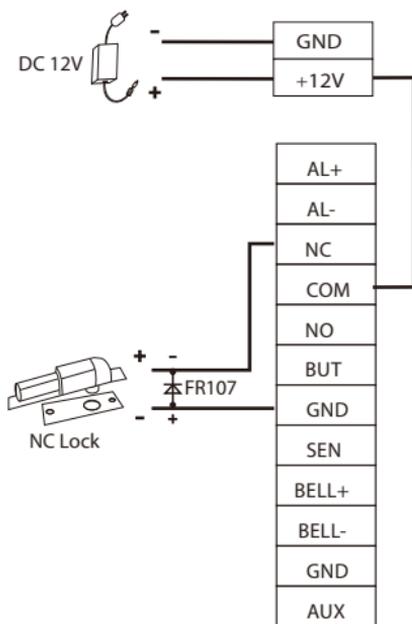



## Wiegand Output Connection

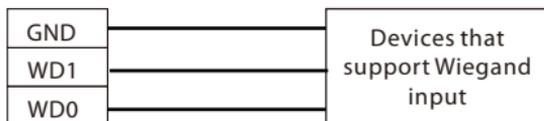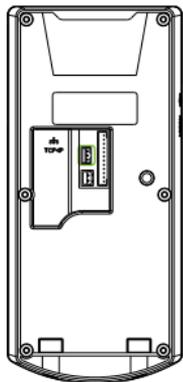

The device provides standard Wiegand26 output that can be used as a reader.

**Note:** Whether it is powered by the access controller or not, it should connect the GND port with the access controller to ensure stable Wiegand transmission.

## Ethernet Connection

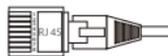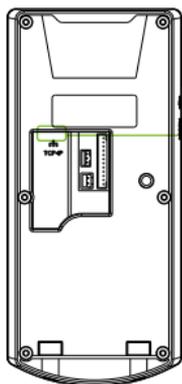



IP address: 192.168.1.130  
Subnet mask: 255.255.255.0

Default IP address: 192.168.1.201  
Subnet mask: 255.255.255.0

Press **M/OK** to enter the main menu, and select [COMM.] > [Ethernet] > [IP Address], input the IP address and click [OK].

**Note:** In LAN, IP addresses of the server (PC) and the device must be in the same network segment when connecting to computer software.

# Power Connection

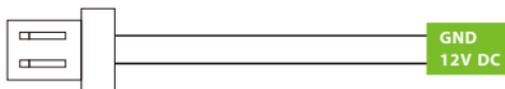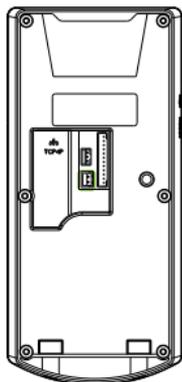

## Recommended power supply

- 1) Rating of 12V and 1.5A
- 2) To share the power with other devices, use a power supply with higher current ratings.




# Quick Start



## ❖ User Registration




When there is no super administrator set in the device, press **M/OK** to enter the main menu. After setting the super administrator, the system will request for the administrator's verification before entering the menu. For the security purpose, it is recommended to register a super administrator at the first time you use the device.

Press **M/OK** to enter the main menu, select [User Mgt.] > [New User] to register a new user. Settings include entering user ID and name, registering fingerprint, badge (optional) and password, setting user role and access control role.

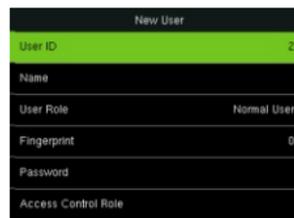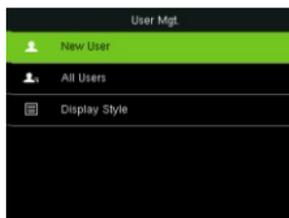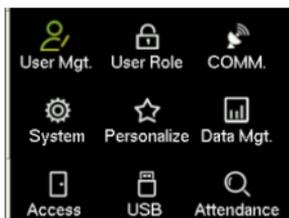

## ❖ User Authentication

Press the fingerprint/enter the password/swipe the card (optional) on the device. After successful verification, the interface is shown in the figure below.

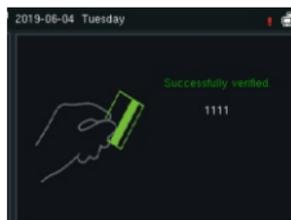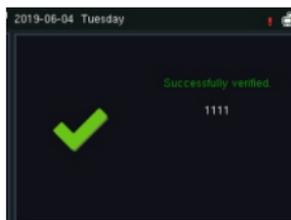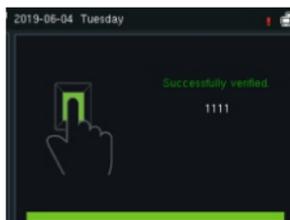


Verification is successful

## ❖ View Records

### View records on the device

Press **M/OK** to enter the main menu and select [Attendance Search] to enter the record query interface. Input the user ID and select the time range, press **M/OK** to query.


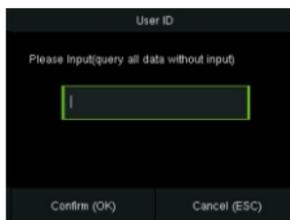


Personal Record Search		
Date	User ID	Attendance
06-04		Number of Records:02
	3	17.58
	1	16.28

Details : OK

### Download data by USB-disk

Press **M/OK** to enter the main menu and select [USB Manager] > [Download]. Insert the USB-disk into the USB port of the device, and download the attendance data or user data on the device.

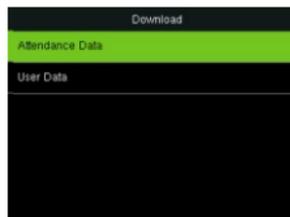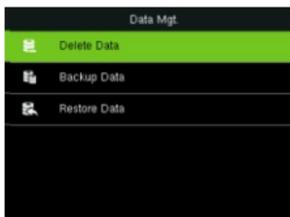




## View records on the software

1. Connect the device to the network.
2. Login to the ZKAccess3.5 software.
3. Add the device on the software. Download the device records. Then you can click [Report] to view the records.

**Note:** For specific operation of ZKAccess3.5 software, please refer to **ZKAccess3.5 Security System User Manual**.



## Ethernet Settings

Press **M/OK** to enter the main menu and select [COMM.] > [Ethernet] to set the network parameters. If the TCP/IP communication of the device is successful, the icon  will be displayed in the upper right corner of the standby interface.

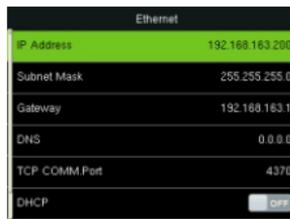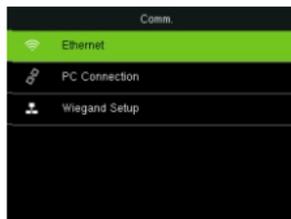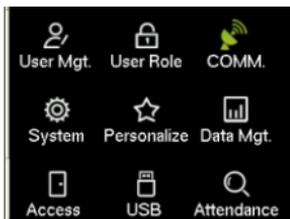

## Access Control Settings

Press **M/OK** to enter the main menu and select [Access Control] to enter the access control management interface and set relevant parameters of access control.

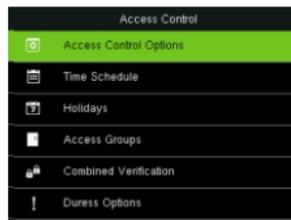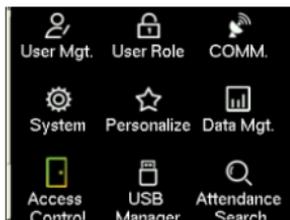

ZK Building, Wuhe Road, Gangtou,  
Bantian, Buji Town, Longgang  
District, Shenzhen China 518129  
Tel: +86 755-89602345  
Fax: +86 755-89602394  
[www.zkteco.com](http://www.zkteco.com)

